

ROCKNROLLER®

MULTI-CART®

Congratulations on your purchase from RocknRoller Multi-Cart, the most acclaimed and innovative transforming utility carts available. Although very easy to use, RocknRoller Multi-Cart's patented design operates differently than typical carts or dollies. To ensure maximum performance from your RocknRoller Multi-Cart, we recommend reading this instruction and assembly sheet thoroughly. U.S. Patent #'s: 5,228,716; 5,476,282; 6,966,574; 7,437,801; 7,490,847 & Pats. Pend.

LIMITED WARRANTY: RocknRoller Multi-Carts carry a one year limited warranty against defective material or workmanship on basic frame and components. Casters and wheels carry a 60 day warranty against defects. As with any equipment, normal maintenance is required. Caution should be used when moving any load with Multi-Carts or any other dolly.

RMH1 Model Specifications

Length (Compact)	24"
Length (Extended)	39"
Width (Frame Bed)	14.5"
Width (Rear Wheels)	18"
Height (Folded)	6.75"
Height (Unfolded)	39"
Wheels	6" x 1.5"
Weight	9.6 lbs.
Load Capacity	200 lbs.


Your RocknRoller Multi-Cart shipping box should contain a frame and the following parts:

2 x	1/8" x 1" cotter pins
2 x	16 mm flat washer
2 x	6" x 1.5" (150 mm x 37 mm) wheels
1 x	Assembly/instruction sheet
2 x	530 mm Non-Skid Tape

Assembly Instructions

Caution: Be careful to not pinch or strike fingers during assembly. Be careful of metal burrs inside tubing.

1. Installing Rear Wheels

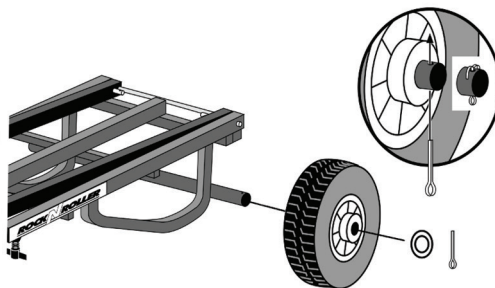

Gently slide wheel over axle as shown. Do not force wheels onto axle. It is recommended to lubricate axles with light grease before installing. Install cotter pins and bend ends outward. Please note: Push on the right side (left side when facing the cart) of the nose to unlock the hand truck, so it can be raised and stored when not in use.



Customer Service & Technical Support

ACE PRODUCTS GROUP

3920 Cypress Drive, Suite B Petaluma, CA 94954 • 800-950-1095 • 707-765-1500 • www.rocknrollercart.com • info@aceproducts.com